

YANMAR

CONSTRUCTION

LONG TERM STORAGE

Important:


Set up the machine as illustrated in the figure to the right after all precautions have been taken.

In this position the maximum protection to the cylinders is afforded.

Long term storage:

- * When storing the machine indoors, park the machine on level ground and cover it with a protective covering, after performing storage measurements.
- * Machine should be pressure washed to remove built up dirt, salt and other contaminants. Let air dry or use air pressure to dry machine.
- * Lubricate all grease fittings, change engine oil and filter
- * Factory engine coolant is protective to -31 F [0 C], all precautions should be taken to ensure that the coolant mixture is adequate for the lowest temperature for the area. Please refer to the machines operators manual for proper coolant mixture.
- * Fill battery with distilled water up to the correct level mark. Check charge and recharge if condition applies. After battery is fully recharged remove the negative battery cable or remove battery for storage.
- * Antirust:
When stored near or is exposed to salt water or salt water air, the machine easily becomes rusty. Carefully apply grease to all exposed areas of the cylinders rods and cover the machine with a polyethylene sheet or oil paper.
- * Fuel:
To prevent condensation from forming inside the fuel tank, it is advisable to drain the tank or fill tank completely.

Retract the bucket and arm cylinders to place the bucket on the ground.

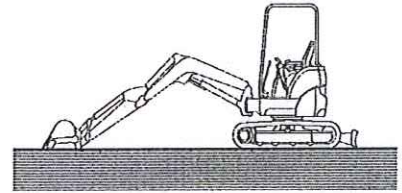

000512-00E